



UFS Corporation

330 North 400 East
 Valparaiso, IN 46383-9704 USA
 PH: 219-464-2027 FAX: 219-464-8646
 www.ufsc.com
 email: service@ufsc.com

Installation Reference

Topic: Float Switch - UFSc PN 280010

Please read all the instructions listed below to familiarize yourself with the project before performing any work or unpacking any further.

Required Materials

- Teflon Tape
- Volt Meter

1. Before attempting to install the float switch be sure to turn off the power to the pump.
2. Drain the Anolyte tank.
3. Remove the old float switch and discard.
4. Apply Teflon tape to the new float switch and install to the tank. Install with the "Blue" mark up.
5. Use the Volt meter to confirm that the switch is open.
6. Connect the wires as required.
7. Fill the tank to inspect the float switch and to make sure it is in proper working order.
8. Use pipe length to push float closed to ensure it is properly operating.
9. Switches should be installed so the float is free to move as the liquid level changes.
10. Switches should be mounted in a tank area free of turbulence or should be protected by adequate shields.
11. Care should be taken that switches are always operated within electrical ratings. See Chart.

Required Tools

- As Required

	(Resistive)
220AC	0.14
110AC	0.28
120DC	0.07
24DC	0.28

The above ratings are for resistive loads only. For inductive loads, maximum life will be achieved if appropriate arc suppression is used.

Maintenance

Maintenance should consist of inspection to see that the float is free to move and not coated with any substance, which would change its weight or volume significantly. The only repair possible in the field is the replacement of the entire unit.

For more information see the original manual that came with the equipment or call UFSc at the phone number shown above.

Current & Voltage Ratings

Voltage	Current Amps
---------	--------------